



Presence  
Control System  
for Fitting Rooms

## JUMPSTART GUIDE

### 1 / Access

Press "settings"  
To access the login pad



Enter store code  
First 4 digits only




**!** Store code not working?  
Try the system's default code  
1 2 3 4

**i** See the grid?  
Good! You're now in  
configuration mode




### 2 / Cabin selection

Click on a device  
Each device controls a group  
of cabins in the store

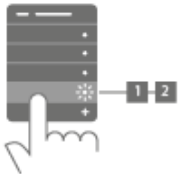

Cabin lights begin to blink  
All cabins controlled by the  
device you clicked on will  
blink for 10 seconds

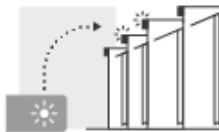

**!** No blinking lights?  
The device you clicked on  
controls cabins located in  
a different fitting room.

Click on another device  
in the list until you see  
cabin lights blinking in  
your fitting room


Press the **+** button  
To add all these cabins to  
your screen



Add remaining cabins  
Repeat the process until all  
cabins have been selected




**i** Spread out the cabin boxes  
Press on the box center and  
drag

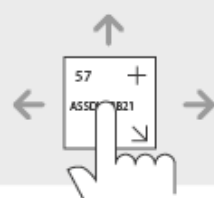


### 3 / Cabin numbers

**i** Match box numbers to  
cabin numbers

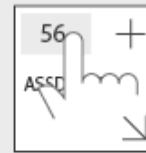

Click on the box number.  
The corresponding cabin  
light will blink

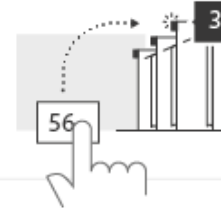


Type the correct number  
Repeat the process for all  
boxes




### 4 / Layout


**i** Move boxes to resemble  
your fitting room layout

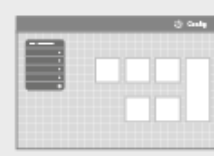

Boxes can be stretched  
By pressing and dragging the  
arrow

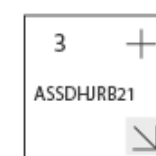

Confirm and Exit  
Once the layout is finished,  
press the **✓** button

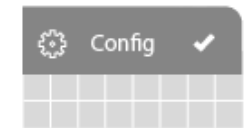


### 5 / Testing & Reporting

Have someone walk in  
and out of a cabin



Check presence control  
on your screen

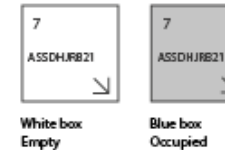

**!** Not working correctly?  
Go back to configuration  
mode and make sure  
the cabin numbers are  
correctly assigned.

**i** File a report at the end  
of the process  
Please see instructions  
below